

FIG. 1

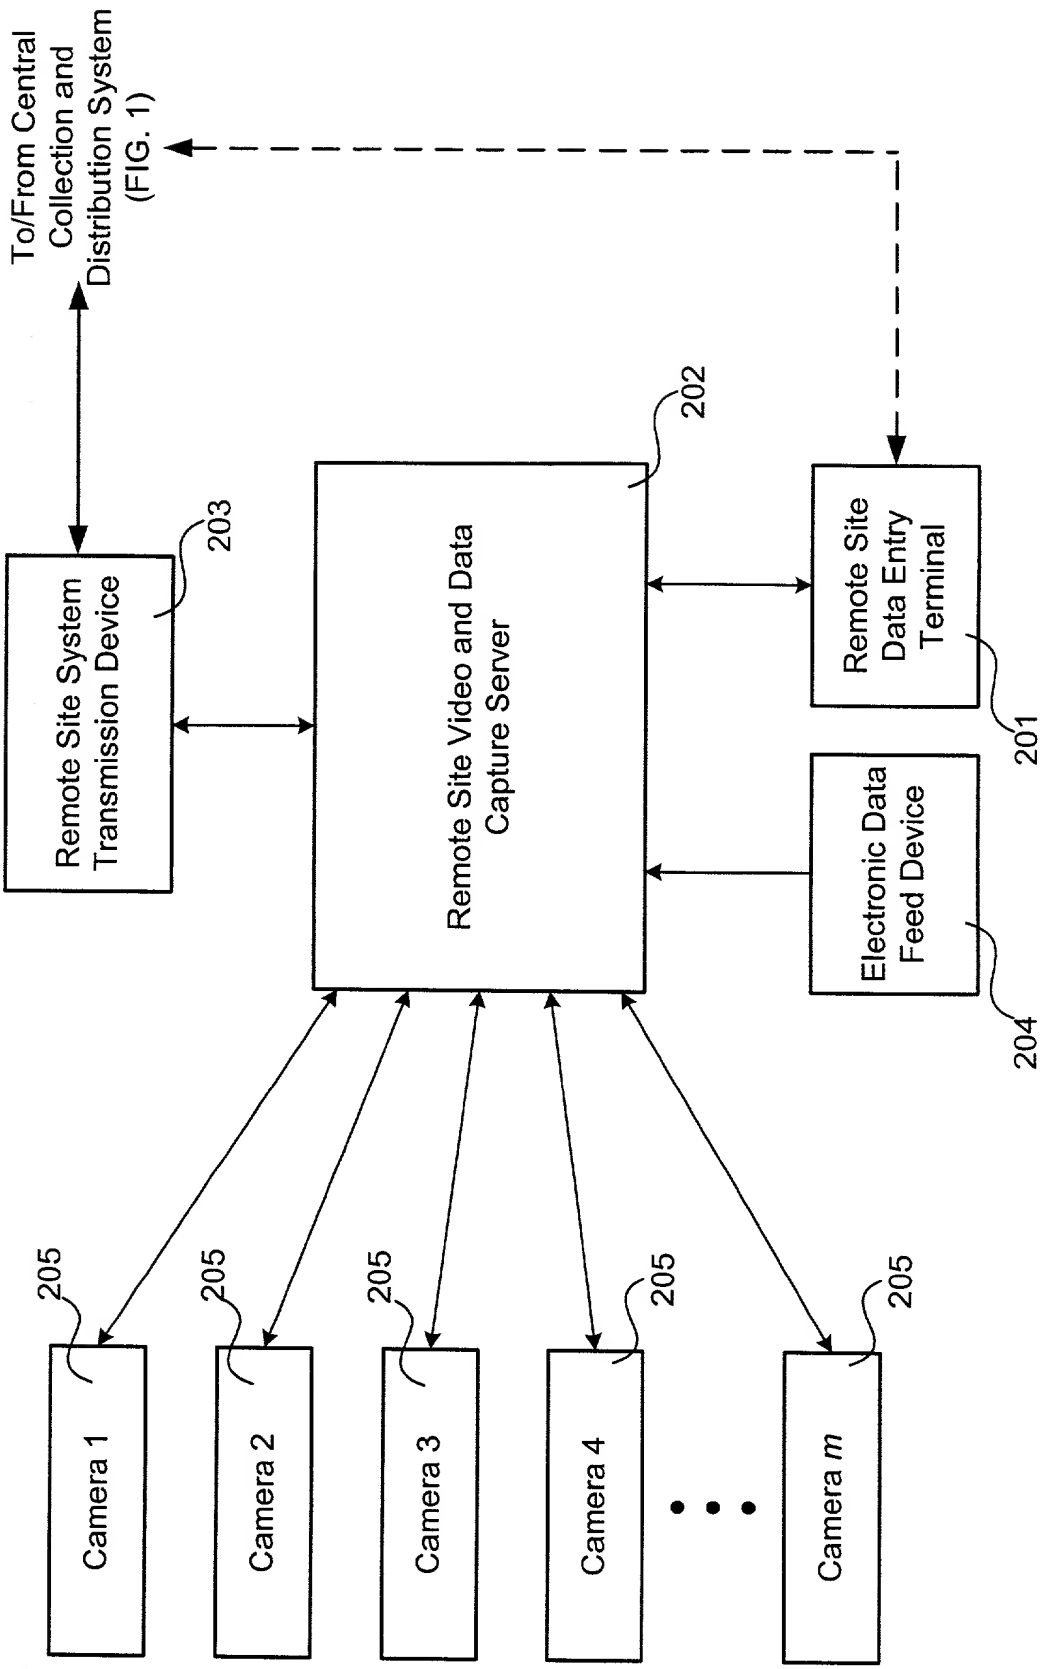


FIG. 2

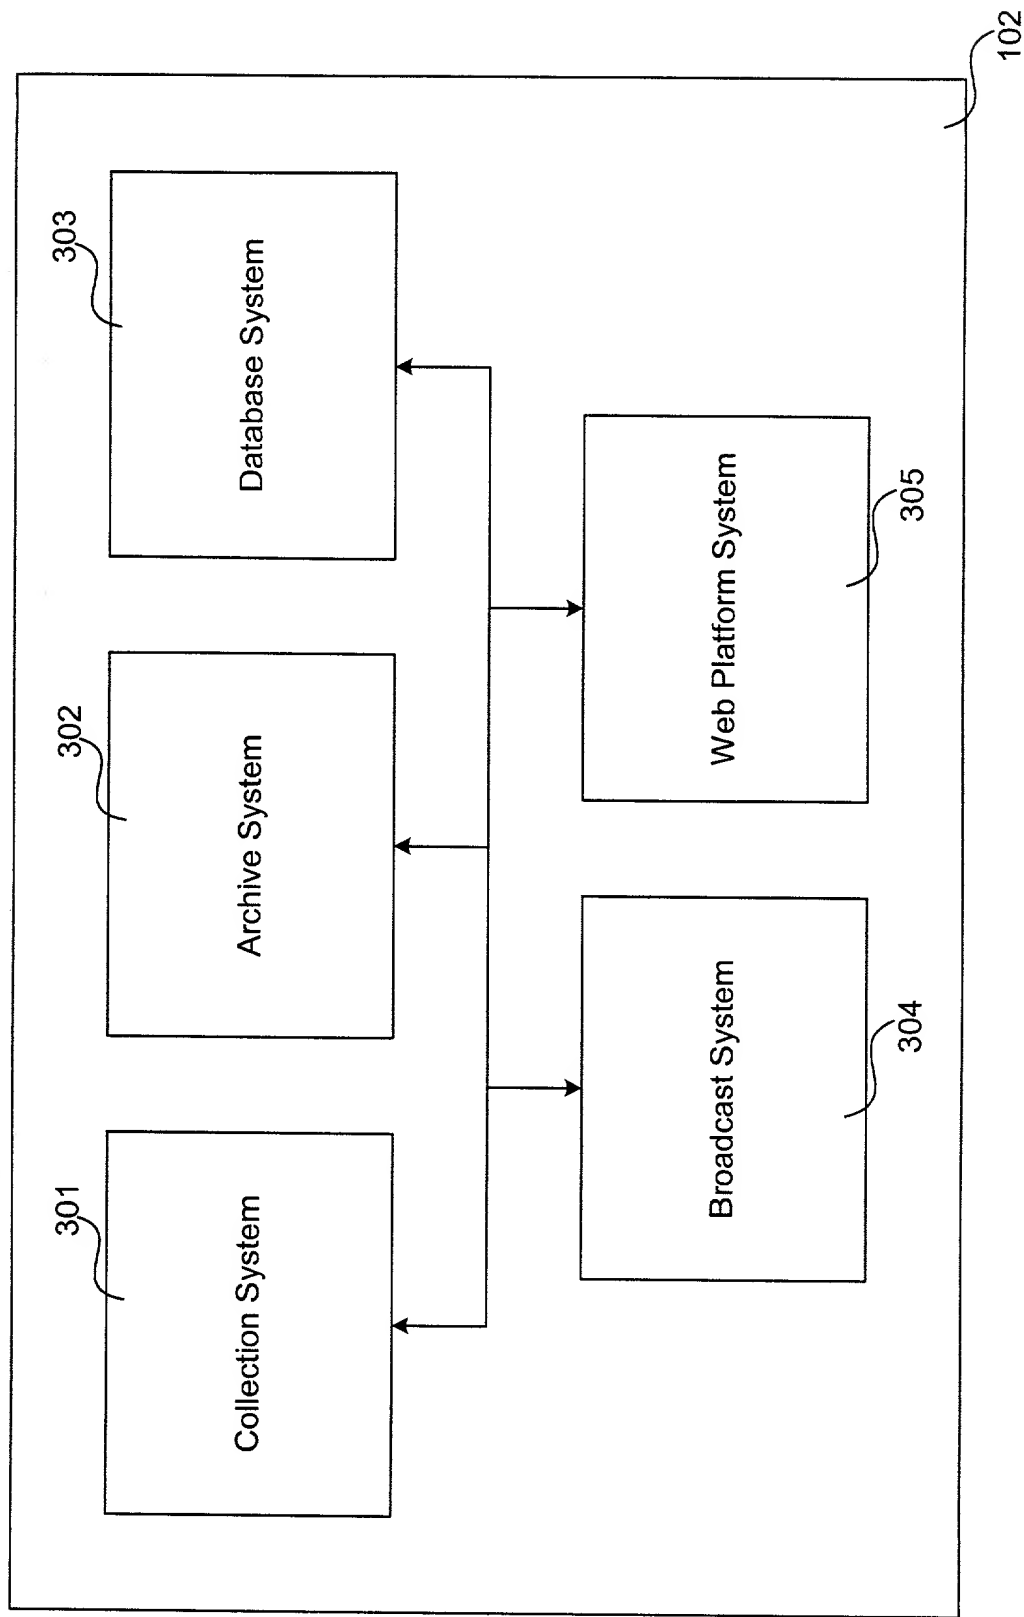


FIG. 3

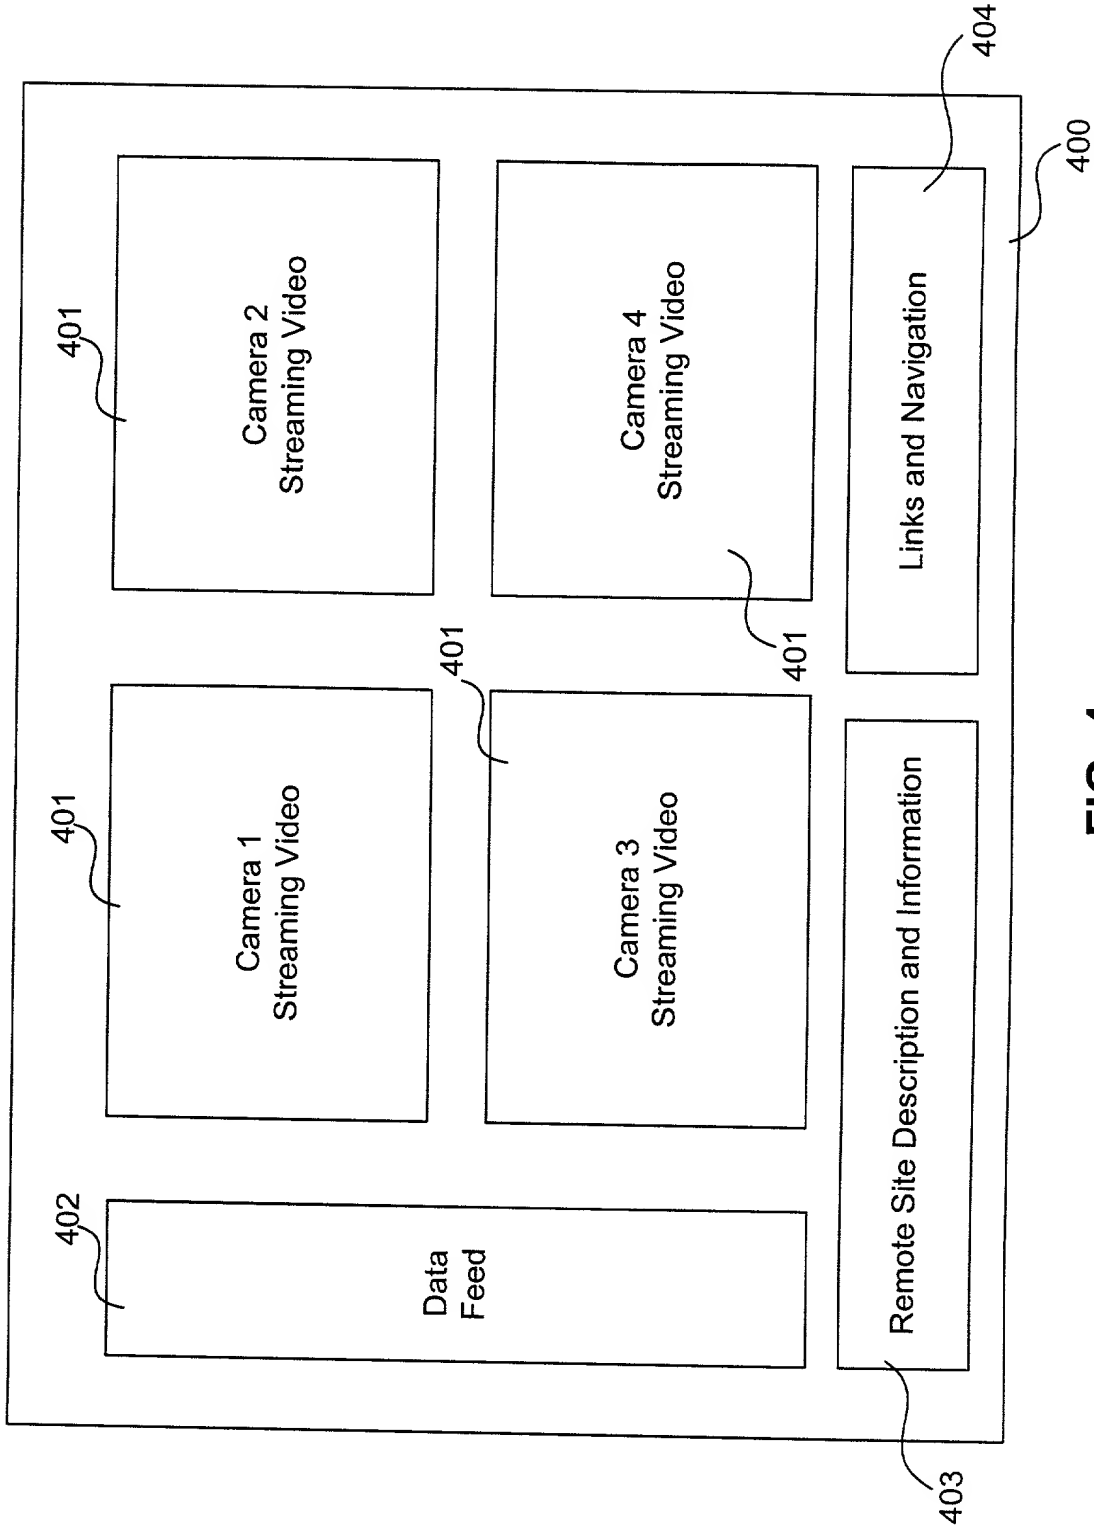


FIG. 4

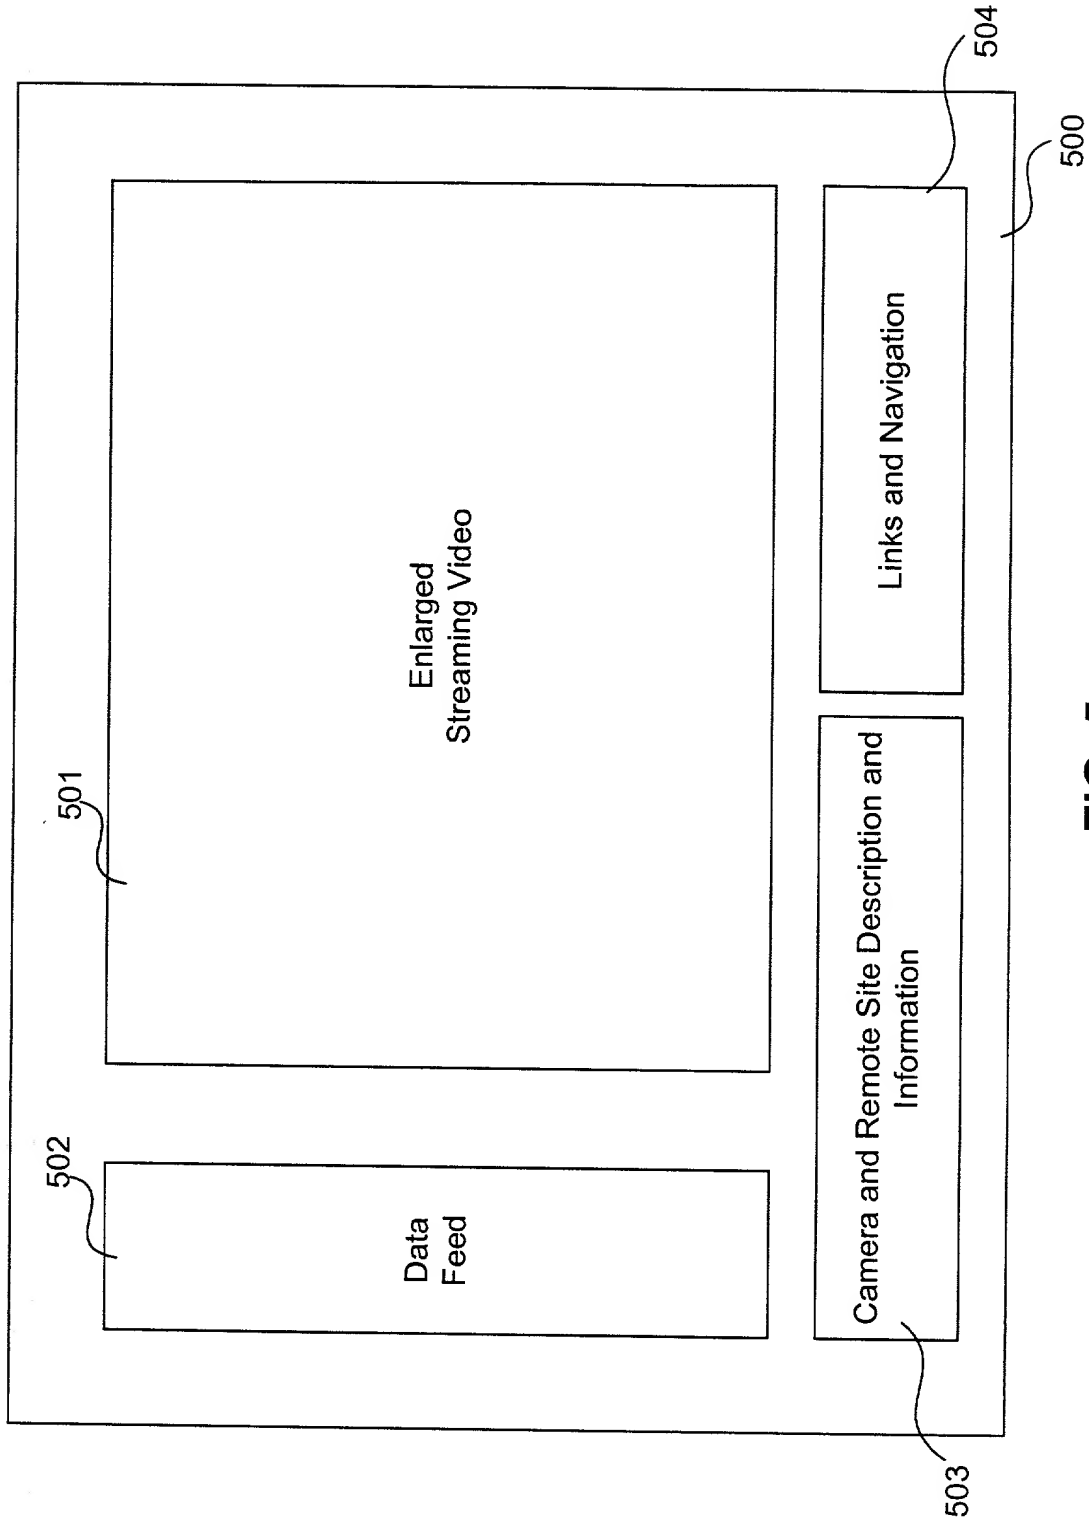


FIG. 5

Event Advisor - Remote Site Selection

Select Wells, then click "Next" ...

Venture Name 1

- ☐ Well Name 1.1
- ☐ Well Name 1.2
- ☐ Well Name 1.3
- ☐ Well Name 1.4

Venture Name 2

- ☐ Well Name 2.1
- ☐ Well Name 2.2
- ☒ Well Name 2.3

Venture Name 3

- ☐ Well Name 3.1
- ☐ Well Name 3.2
- ☐ Well Name 3.3
- ☐ Well Name 3.4
- ☐ Well Name 3.5
- ☐ Well Name 3.6
- ☐ Well Name 3.7
- ☐ Well Name 3.8
- ☐ Well Name 3.9

Venture Name 4

- ☒ Well Name 4.1
- ☐ Well Name 4.2
- ☒ Well Name 4.3
- ☐ Well Name 4.4
- ☐ Well Name 4.5

Venture Name 5

- ☐ Well Name 5.1
- ☐ Well Name 5.2
- ☐ Well Name 5.3
- ☐ Well Name 5.4

Venture Name 6

- ☒ Well Name 6.1

Venture Name 7

- ☐ Well Name 7.1
- ☐ Well Name 7.2
- ☐ Well Name 7.3
- ☐ Well Name 7.4

Venture Name 8

- ☐ Well Name 8.1
- ☐ Well Name 8.2

Venture Name 9

- ☐ Well Name 9.1
- ☐ Well Name 9.2
- ☐ Well Name 9.3
- ☐ Well Name 9.4
- ☐ Well Name 9.5
- ☐ Well Name 9.6
- ☐ Well Name 9.7
- ☐ Well Name 9.8

Venture Name 10

- ☐ Well Name 10.1
- ☐ Well Name 10.2
- ☒ Well Name 10.3
- ☐ Well Name 10.4
- ☐ Well Name 10.5

Data or
Navigation
Links

Next

FIG. 6A

Event Advisor - Event Parameter Selection

Select Events for Venture Name 2,
Well Name 2.3 and then click the
"Set" button to activate.

☒ Approaching or at Target Zone

☐ Depth of feet/ meters reached

☐ Gas Kick Reported

☒ Oil Struck

☐ Drilling Stopped or Delayed

☐ Adverse Weather Conditions Reported

Data or
Navigation
Links

Set

603

603

600b

FIG. 6B

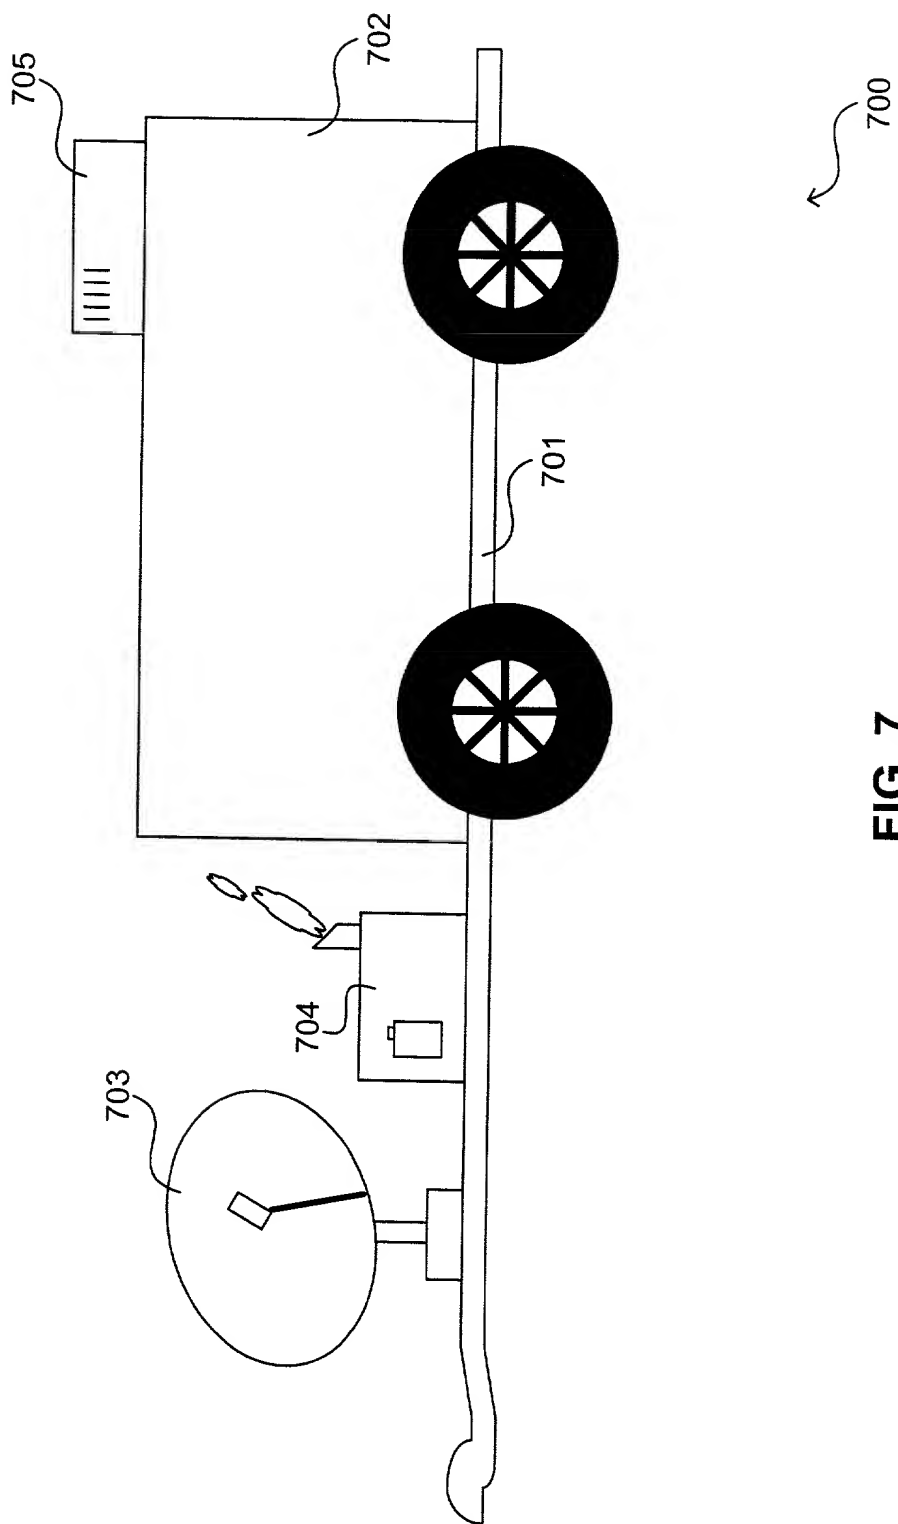


FIG. 7